

HT Box CR2


Technical hardware:

- Additional module common rail,
- On / off button
- 8 maps in memory,
- Rotary switch / maps (0 > 7),
- 1 power LED (ON / OFF),
- 1 LED injection (Tuning in process)
- Automotive Connectors,
- 150 cm cable plug & drive for injection,
- Reprogrammable to change vehicle (extra service),
- Reprogrammable remotely via the Internet.

features:

The CR2 a button and two LEDs divided by function,

- Button 1 = on / off,
- Rotary switch for selecting maps numbered,
- USB port, used for reprogramming the software (to be used after installing the site HT MANAGER MAPPS).
- LED: LED 1 to the left of the button indicates the status of the module, if switched ON, LED 2 indicates the tuning in the course of 'injection'.

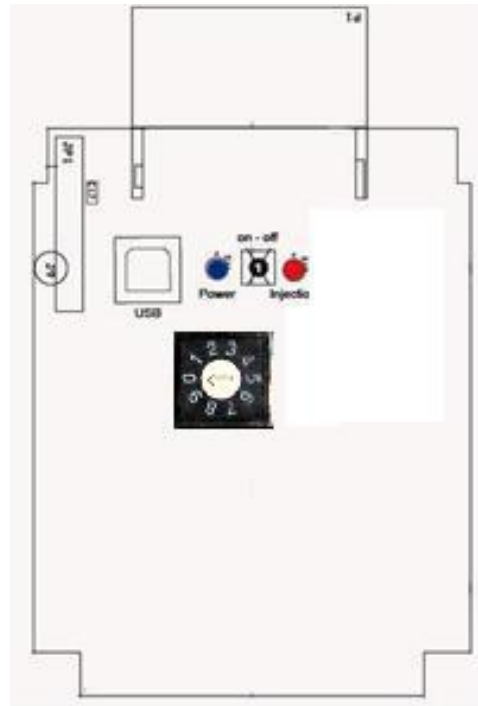

Using the remote control:

Digital technology HT Box CR2, enables the processor to store the 'last order received, thereby setting the module to ON, it will remain active forever to start the engine, until reverse order. By setting to ON, do not need power to the module each time you start the engine, the lights automatically after 5 seconds of 'engine start.

Using the keys:

A = on

B = off

C + D are not used on CR2.

IMPORTANT: Both the A and B button press on the remote control, should be 2 seconds to perform the ON / OFF control; a momentary pressure, for example 1 second, is interpreted by the processor as a "involuntary pressing of the key".



Learning Remote Control:

The button 1 CR2 also acts learning remote control.

To learn the remote control signal, follow this procedure:

Press and hold the 1 (power), then the food CR2da USB connector or by injection, at this point the red LED flashes.

You must now press A and then the B button

At this point the red lights stop flashing and the signal will be heard.

This procedure is not 'necessary, as already' registered by the manufacturer House-Tuning.

Setting the programs:

The digital construction of CR2 lets you choose the program that best fits the model of car, engine capacities and preferences of users.

To select the program, you have to remove the cover of the box (4 screws).

All 'inside there is a button to turn off and on, and the rotary switch to increase or decrease the power:

- Key 1: On / Off



The selected program is indicated by the arrow (see picture)

- the program 0 is equivalent to the minimum power,
- The program 7 delivers maximum power.

To restore the original car, press the button on the circuit of the CR2 (led 1 off) or the B key on the remote control.

After installing the module, and after checking the proper connections, the engine can be started.

If necessary, the program can be modified online.



Software:

The software CR2 has a dual function:

1 read and write maps.

2 iTs generate files, these files allow our tuners to set correctly the tuning files.

Files can be easily exchanged by mail, and customized for the customer today and in the future (the software update service to change parking is not included for free).

NB: For 'refer to the specific installation of' car in question.

